

OWNERS MANUAL

 
Guide No. 15032

MODEL NO. 2492

COLECO VISION™

ROLLER CONTROLLER

Exciting High-Speed Action on Your
ColecoVision™ Game System!

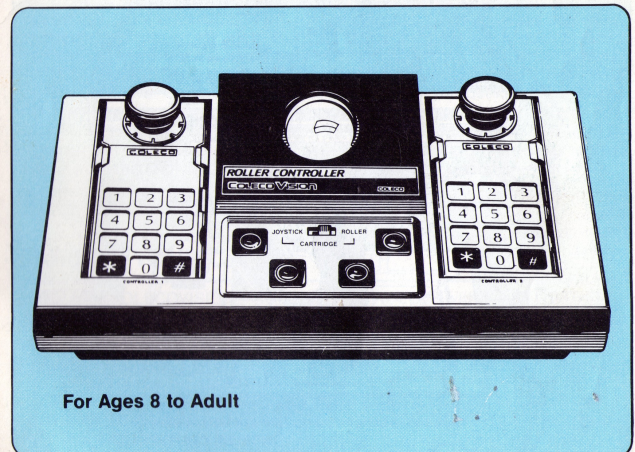

For Ages 8 to Adult

COLECO

 
Imported by: Coleco (Canada) Limitée, 4000 St. Ambroise, Montreal,
Quebec, Canada H4C 2C8

© 1983, Coleco (Canada) Limitée

Printed in Canada

COLECO

Importé par: COLECO (CANADA) LIMITÉE, 4 000 St-Ambroise, Montréal
(Québec), Canada H4C 2C8
© 1983 Coleco (Canada) Limitée

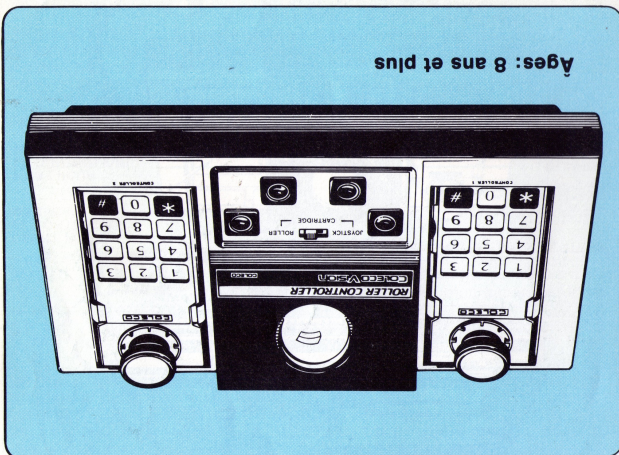

Âges: 8 ans et plus

CONTRÔLEUR À BILLE
Pour un jeu d'action à haute vitesse
avec votre système vidéo
ColecoVision™!

COLECO VISION™

MODEL NO 2492

GUIDE DU JOUEUR

Guide No 15032

 
Imprimé au Canada

CONSUMERS PLEASE NOTE!

Please read the Owner's Manual carefully before using this product. If a malfunction occurs, please refer to the Troubleshooting Checklist.

THIS PRODUCT SHOULD BE ASSEMBLED ONLY BY AN ADULT.

HOOKING UP YOUR ROLLER CONTROLLER

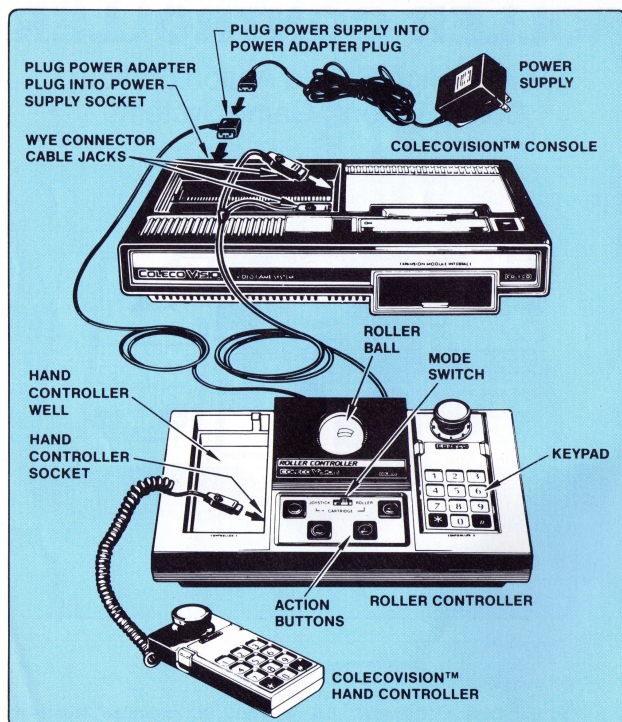

2

1. Unplug and remove the Hand Controllers from the ColecoVision™ Console unit.
 2. Plug a Hand Controller into the socket inside a Hand Controller Well of the Roller Controller.
 3. Wind the Hand Controller Cord neatly inside the Well, then slide the bottom of the Hand Controller into the Well. When Hand Controller is in place, push the top of the Hand Controller down until it snaps into place. Attach the other Hand Controller to the Roller Controller in the same manner. The Hand Controller jacks will fit only one way — **DO NOT FORCE** them into the controller sockets.
 4. The WYE Connector Cable jacks have the number 1 molded on top of one jack and the number 2 molded on top of the other jack. Plug jack # 1 into the rear socket, then plug jack # 2 into the front socket inside the Hand Controller storage compartments of your ColecoVision™ Console unit as shown in illustration. Be sure the numbers are facing up when you are plugging in the jacks.
 5. Plug the Power Adapter Plug from the Roller Controller unit into the Power Supply socket in back of your ColecoVision™ Console unit.
 6. Plug the jack of the AC Power Supply unit into the back of the Power Adapter Plug as shown in illustration. Plug the AC Power Supply unit into a 110/120 volt household electrical outlet. Make sure the Power Supply is fully inserted into the electrical outlet.
 7. **MODE SWITCH:** The function of the MODE SWITCH is to select between a Joystick cartridge and a cartridge designed exclusively for use with the Roller Controller. Slide the MODE SWITCH to the ROLLER Cartridge position when playing roller-game cartridges. The JOYSTICK Cartridge position can be used with most games that require use of the hand controller Joystick. Some Joystick cartridge games will be more challenging than others when played with Roller Controller. Get the "feel" of the game before you decide to use Roller Controller to play a Joystick cartridge game.
- Now you are ready to begin playing your game! **BE SURE THAT THE COLECOVISION™ UNIT IS OFF BEFORE INSERTING OR REMOVING CARTRIDGE.** Refer to your GAME CARTRIDGE Instruction Guide for game play instructions.

WARNING: ALWAYS UNPLUG THE POWER SUPPLY FROM THE 110/120 VOLT OUTLET WHEN YOU HAVE FINISHED PLAYING.

CARE OF YOUR GAME

- Treat your COLECOVISION™ ROLLER CONTROLLER with care.
- Before inserting or removing GAME CARTRIDGE, **always make sure that the POWER SWITCH on CONSOLE unit is turned "OFF"**.
- Always unplug the POWER SUPPLY from the 110/120 volt outlet when you have finished playing. **IMPORTANT: ONLY CONNECT THE CONSOLE POWER SUPPLY UNIT INTO A 110/120 VOLT HOUSEHOLD ELECTRICAL SERVICE, OTHERWISE SERIOUS DAMAGE MAY OCCUR TO ELECTRICAL PARTS OF THE SYSTEM.**
- Do not drop or bang ROLLER CONTROLLER, CONSOLE or HAND CONTROLLERS.
- Do not use sharp or pointed object to activate KEYPAD BUTTONS or GAME ACTION BUTTONS.
- Do not store or leave ROLLER CONTROLLER, CONSOLE and accessories where they may be subject to heat build-up.

3

- Keep away from moisture. Do not immerse ROLLER CONTROLLER, CONSOLE or HAND CONTROLLERS in water. Use a soft, slightly damp cloth to wipe clean.

WARNING: Before cleaning ROLLER CONTROLLER, CONSOLE and accessories, turn POWER SWITCH to "OFF" and disconnect the AC POWER SUPPLY unit from the 110/120 volt wall outlet.

- Do not attempt to repair ROLLER CONTROLLER.** It does not contain any owner serviceable parts. Refer to your TROUBLESHOOTING section, if not successful refer to LIMITED WARRANTY.

NOTICE

This game generates and uses radio frequency energy and if not installed and used properly, may cause interference to radio and television reception. It has been tested to provide reasonable protection against such interference in a residential installation. If this game does cause interference to radio or television reception, which can be determined by turning the game off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the TV antenna.

Relocate the game with respect to the TV.

Move the game away from the TV.

Plug the game into a different outlet so that game and TV are on different branch circuits.

TROUBLESHOOTING

SYMPTOM	REMEDY
<ul style="list-style-type: none"> Snow 	<ul style="list-style-type: none"> Make sure that both connections for the power supply are secured in their proper ports.
<ul style="list-style-type: none"> No Hand Controller Response 	<ul style="list-style-type: none"> Make sure that the switch on the Roller Controller console is in the "Joystick Cartridge" mode.
<ul style="list-style-type: none"> Roller Response Backwards 	<ul style="list-style-type: none"> Make sure that the controller plugs are inserted into the correct ports on the ColecoVision Main Console.

90 DAY LIMITED WARRANTY

Coleco warrants to the original consumer in Canada that its Roller Controller will be free of defects in material and workmanship for 90 days from the date of purchase under normal in-house use.

If your ColecoVision™ fails to operate properly DURING THE FIRST 90 DAYS AFTER PURCHASE, return complete unit postage prepaid and insured with your name, address, proof of the date of purchase and a brief description of the problem to: Coleco (Canada) Limitée, Customer Service — Electronics, 4000 St. Ambroise, Montreal, Quebec, Canada H4C 2C8. If your unit is found to be factory defective during the first 90 days, it will be repaired or replaced (with a new or reconditioned model at our option) at no cost to you. If the unit is found to have been consumer damaged or abused and therefore not covered by the warranty, then you will be advised in advance of repair costs.

Coleco's sole and exclusive liability for defects in material and workmanship shall be limited to repair or replacement at its authorized Coleco Service Station and Coleco shall in no event be liable for incidental, consequential, contingent or any other damages. This warranty does not obligate Coleco to bear the cost of transportation charges in connection with the repair or replacement of defective parts.

This warranty is invalid if the damage or defect is caused by accident, act of God, consumer abuse, unauthorized alteration or repair, vandalism or misuse.

This warranty is made in lieu of any other express warranty, and except for the foregoing warranty which is exclusive, there is no other express warranty being made.

Please read the Owner's Manual carefully before using the product. If a malfunction occurs, please refer to the troubleshooting checklist. If you cannot correct the malfunction after consulting the troubleshooting checklist, return complete unit as outlined above.

SERVICE POLICY

If your game requires service after expiration of the 90 Day Limited Warranty period, Coleco will service the game and put it in working condition or replace it with a reconditioned model (at our option) on receipt of your cheque payable to Coleco (Canada) Limitée in the amount of:

Roller Controller \$35.00

Coleco's service obligation does not apply to defects arising from abuse, misuse or alteration of the unit. If the unit is found to have been consumer damaged or abused, then you will be advised, in advance, of repair costs.

Please allow 4 to 6 weeks for repair and return.

All returns must be directed to: **Coleco (Canada) Limitée
Customer Service —
Electronics
4000 St. Ambroise
Montreal, Quebec, Canada
H4C 2C8**



ROLLER CONTROLLER

Exciting High-Speed Action on Your
ColecoVision™ Game System!

Package, Program and Audiovisual © 1983 Coleco Industries, Inc. Amsterdam, New York 12010

ColecoVision™ is a trademark of Coleco Industries, Inc.

CONSUMERS PLEASE NOTE!

Please read the Owner's Manual carefully before using this product. If a malfunction occurs, please refer to the Troubleshooting Checklist.

PLEASE RETAIN THIS GUIDE
AND ALL LITERATURE FOR FUTURE REFERENCE



Coleco (Canada) Limitée, 4000 St. Ambroise, Montreal, Quebec, Canada
H4C 2C8

COLECO (CANADA) LIMITEE, 4 000 St-Ambroise,
Montreal (Quebec), Canada H4C 2C8



VEUILLEZ CONSERVER CE GUIDE ET TOUTE
DOCUMENTATION POUR CONSULTATION
ULTERIEURE.

Veuillez lire le guide du joueur avant d'utiliser
le jeu. S'il ne fonctionne pas correctement,
veuillez vous référer à la section dépannage.

AVIS AU CLIENT!

Emballage, programmation et audio-visuel © 1983 Coleco (Canada)
Limitée, 4 000, rue St-Ambroise, Montréal (Québec), Canada H4C 2C8
ColecoVision™ est une marque déposée de Coleco (Canada) Limitée

Pour un jeu d'action à haute vitesse avec votre
ColecoVision™!

CONTRÔLEUR À BILLE

